

Want More Information?

Call our support team on: +44 (0)1254 669090
Or view technical specifications directly on our website:
www.heatmiser.com



PDF



FAQ

Heatmiser UK Ltd
Units 1-5 Hurstwood Court, Mercer Way
Shadsworth Business Park, Blackburn,
Lancashire, BB1 2QU, United Kingdom.

neo family
Scan for the required
Statement of Compliance,
including the security
update support period.




Hereby, Heatmiser UK Ltd declares that the radio equipment type (designation of type of radio equipment) is in compliance with Directive 2014/53/EU.
RF Frequency: 868mhz 2dBm, 2.4Ghz 3.5dBm.

Rev 1.2




Model: Boost V2

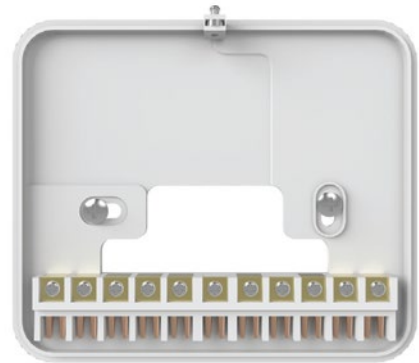

2 Installing the Boost V2

- Using a small screwdriver, slightly loosen the screw located at the base of the Boost. You can then carefully separate the front panel from the back plate.
- Position the Boost back into place using the screws provided.
- Terminate the cables to the Boost as shown in the wiring diagram (section 6).
- Mount the front panel onto the back plate, tighten the retaining screw on the base.
- Switch on the power LED supply, the power LED will illuminate.

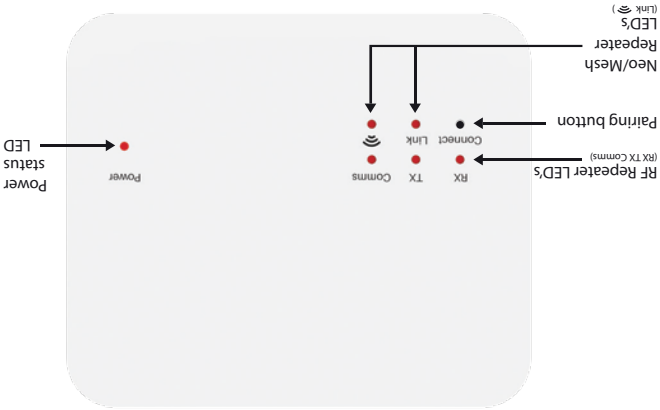

1 Boost – LED/button indication

3 Using the Boost V2 with the Wireless Series system



The Heatmiser Boost V2 is a repeater designed to extend the communication distance of the neoAir & Slimline-RF thermostats to the RF-Switch or UH8-RF wiring centre.

On the Boost V2, set switch number 3 to the OFF position 

The Boost V2 repeater does not need to be paired to any devices on the system.

Signals that are being transmitted by the thermostats will be detected by the Boost V2 and repeated on to the RF-Switch or UH8-RF.

5 Using the Boost V2 with the neoHub Mini System



The Heatmiser Boost V2 is a repeater designed to extend the communication distance of the neoAir V2 thermostats to the neoHub Mini.

On the Boost V2, set switch number 3 to the ON position 

The Boost V2 repeater does not need to be paired to any devices on the system.

Signals that are being transmitted by the neoAir V2 will be detected by the Boost V2 and repeated on to the neoHub Mini.

4 Using the Boost V2 with the neoHub system



The Heatmiser Boost V2 is an alternative repeater to the neoPlug, designed to extend the communication distance between neoStats, neoAirs & the neoHub.

On the Boost V2, set switch number 3 to the OFF position 

First pair the Boost V2 repeater to the neoHub, then pair any other devices which require the help of the Boost V2 to communicate with the neoHub.

Signals that are being transmitted by the thermostats will be detected by the Boost V2 and repeated to the neoHub.

Add the Boost repeater from the Home screen in the Neo App;


Select +

Add Accessory

Add Repeater

Then follow the pairing instructions in the app.

6 Boost V2 Wiring Diagram

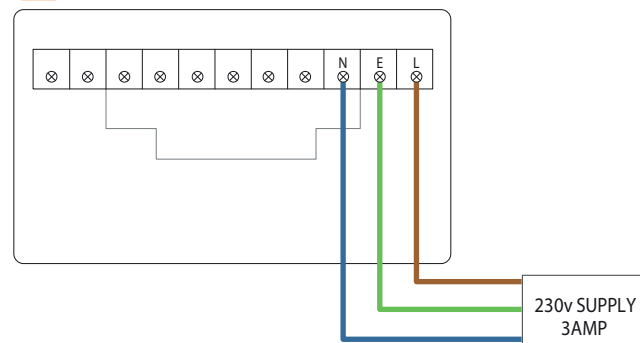

7 Factory Resetting the Boost V2

To reset the Boost V2;

Press and hold the connect button for 10 seconds,

The  light on the Boost will now flash.

Release the connect button.

Once the  light has stopped flashing, the reset procedure is complete.